




 
 












 











 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Pre Ch
	Prime Video		Shift + Smart
	Home		Smart
	Q.Menu		D. Menu

Originalfernbedienung Ersatzfernbedienung

	YouTube		Shift + Media
	Menu		Menu
	Up		Up
	Netflix		Media
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Exit		Exit
	Vol+		Vol +
	Back		Back
	Vol-		Vol -
	Guide		Guide
	Mute		Mute
	Ch+		Ch +
	Ch-		Ch -
	Red		Red



