


 


 
 


 
 
 

 

 
 

 
 
 

 
 





 
 


 







 






 
 
 

 



 

 
 
 
 
 
 
 
 
 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		MTS		Media
	Mute		Mute		Menu		Menu
	1		1		Source		AV
	2		2		Exit		Exit
	3		3		Display		Info
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	ATV/DTV		D. Menu		Rec		Rec
	Recall		Back		Rec List		List
	P.Mode		Format		Tv/Radio		TV/R
	S.Mode		Dual		FAV List		Pre Ch
	Sleep		Sleep		CH+		Ch +



