

ECG  
TV  
RCGU22WDVD3

Mandis Shop S.L.  
Sant Cugat del Vallès (Barcelona)  
info@mandis.es



Layout Keys	Direct	Shift	Layout Keys	Direct	Shift
POWER	Power	Sleep	V	Down	
MUTE	Mute		EXIT	DVD Setup/Exit	
1	1		BACK	Recall	
2	2		VOL+	Vol+	
3	3		VOL-	Vol-	
4	4		INFO	Display	
5	5		FAV(LIST)	FAV	
6	6		CH+	CH+	FAV+
7	7		CH-	CH-	FAV-
8	8		TEXT	Text	
9	9		<?>	I>/Lang	S.Mode
0	0		---	Subtitle	Subpage
VOD	Auto/Eject		TV/RADIO	Angle/D.Disp	
MENU	LCD Menu	D.Menu	OPT+	Audio/Reveal	
>PLAY	Play		SOURCE	Input	
PAUSE	Pause		V-FORMAT	Zoom/Goto	P.Mode
STOP	Stop/Hold		WIDE	Aspect	
oRECORD					
<<	<<				
>>	>>/Title				
<<	I<</Index				
>>	>>I/Size				
RED	Red/Card/Prog				
GREEN	Green/Clear/Intro				
YELLOW	Yellow/Repeat				
BLUE	Blue/A-B				
MEDIA	Nicam				
EPG(GUIDE)	-/--	EPG			
OK	Enter				
^	Up				
<	Left				
>	Right				