












Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 [ I ]/Menu	 Menu / Home
 Red	 Red / Netflix / Search	 Up	 Up
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 Left	 Left
 Blue	 Blue / Prime Video / Random	 OK	 OK
 << / [≡o]	 << / Tune-	 Right	 Right
 >> / [≡?]	 >> / Tune+	 Down	 Down
  << / [≡+]	  << / Preset-	 EPG	 Guide / EPG / -/-
 >>  / [≡..]	 >>  / Preset+	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Vol+	 Vol+
 Pause	 Pause / Step / Freeze	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 CH+	 CH+ / Page+
 [≡i]	 Smart / List	 Vol-	 Vol-
 Text	 Text / Goto	 REP/Rec	 Rec / Rec Mode
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Freeze	 Shift + Pause / Step / Freeze	 1	 1





	Original	Replacement	Original	Replacement
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	Audio	 Audio / Lang I/II		
	0	 0		
	Recall	 Back / Return		


















 





 
 


Original	Replacement	Original	Replacement
Power	 Power		
Mute	 Mute / Dimmer		
Play	 Play / Slow		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		
Rec	 Rec / Rec Mode		
<</Hold	 << / Tune-		
>>/Index	 >> / Tune+		
I<<	 I<< / Preset-		
>>I	 >>I / Preset+		
Nicam/A2	 Audio / Lang I/II		
Subtitle	 Subtitle / EQ		
Subpage	 Eject / Surround		
Size	 Zoom / Size		
Sleep	 Sleep / Timer		
DTV/Radio	 TV/Radio /		
Reveal	 D.Menu / Top		

Original	Replacement	Original	Replacement
TXT/MIX	 Text / Goto		
Menu	 Menu / Home		
Up	 Up		
Info	 Info / Angle		
Left	 Left		
Enter	 OK		
Right	 Right		
Cancel	 Exit / Cancel / Clear		
Down	 Down		
Back	 Back / Return		
Vol+	 Vol+		
List	 Smart / List		
CH+	 CH+ / Page+		
Vol-	 Vol-		
Mode	 Display / Media		
CH-	 CH- / Page-		
1	 1		





Original	Replacement	
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
EPG	 Guide / EPG / -/--	
0		0
FAV	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	
Blue	 Blue / Prime Video / Random	
<</Hold	 +  Shift + Stop /	
FAV-	 +  Shift + Left	

Original	Replacement	
FAV+	 +  Shift + Right	
-/--	 +  Shift + Guide / EPG / -/--	





Original	Replacement
Power	 Power
Mute	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Rec	 Rec / Rec Mode
<</[Timer]	 << / Tune-
>>/[≡?]	 >> / Tune+
I<</[≡↓]	 I<< / Preset-
>>I/[≡...]	 >>I / Preset+
Audio	 Audio / Lang I/II
Subtitle	 Subtitle / EQ
I<</[≡↓]	 Zoom / Size
<</[Timer]	 Sleep / Timer
Text	 Text / Goto
Source/Av	 AV / Input / RDS
[II]	 Menu / Home

Original	Replacement
Up	 Up
Info	 Info / Angle
Left	 Left
Ok	 OK
Right	 Right
Exit	 Exit / Cancel / Clear
Down	 Down
Recall	 Back / Return
Vol+	 Vol+
[≡i]	 Smart / List
Ch+	 CH+ / Page+
Vol-	 Vol-
Ch-	 CH- / Page-
1	 1
2	 2
3	 3
4	 4





Original	Replacement	Original	Replacement
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
Epg	GUIDE EPG		
0	HDMI - SAT 0		
Fav	PC FAV MARKER		
Red	NETFLIX SEARCH		
Green	APP REPEAT		
Yellow	YouTube REPEAT A-B		
Blue	Prime Video RANDOM		
Freeze	SHIFT + STEP - FREEZE		

