
 
 
 
 
 
 

 
 
 




 
 
 
 
 

 
 
 
 


 

 

 
 
 




Original	Replacement	Original	Replacement
	Power		Green / APP / Repeat
	DTV		Yellow / YouTube / Repeat
	TV		Blue / Prime Video / Random
	AV		Vol+
	1		Info / Angle
	2		CH+ / Page+
	3		Vol-
	4		Mute / Dimmer
	5		CH- / Page-
	6		Guide / EPG / -/--
	7		Setup / OPT /
	8		Up
	9		Left
	Text		OK
	0		Right
	PRE-CH		Down
	Red		Menu / Home



