 



 









 















 









 



 







 



 
















 
 












 
 



 



 

 








Original		Replacement		Original		Replacement	
	Power		Power		Text		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play/Pause/Hold		Play / Slow		Menu		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop/Size		Stop / Hold		??		Info / Angle
	Rec Menu		Rec / Rec Mode		Left		Left
	<<		<< / Tune-		OK		OK
	>> / Cancel		>> / Tune+		Right		Right
	I<< / Index		I<< / Preset-		Exit		Exit / Cancel / Clear
	>>I/Reveal		>>I / Preset+		Down		Down
	Nicam		Audio / Lang I/II		Back		Back / Return
	Subtitle		Subtitle / EQ		Vol+		Vol+
	Aspect		Picture / Format		List		Smart / List
	Sleep		Sleep / Timer		CH+		CH+ / Page+
	Tv		TV/Radio /		Vol-		Vol-
	Subpage		D.Menu / Top		Display		Display / Media
	PC Auto		Setup / OPT /		CH-		CH- / Page-





	Original	Replacement		Original	Replacement
	1	 1		 DTV/Radio	 Shift + TV/Radio / Program
	2	 2		 Media	 Shift + Display / Media
	3	 3		 -/--	 Shift + Guide / EPG / -/--
	4	 4		 Repeat	 Shift + Green / APP / Repeat
	5	 5		 A-B	 Shift + Yellow / YouTube / Repeat
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	TVG	 TVG	 TVG		
	0	 0	 0		
	FAV	 FAV	 FAV		Fav / Marker / PC
	Red	 Red	 NETFLIX		Red / Netflix / Search
	Green	 Green	 APP		Green / APP / Repeat
	Yellow	 Yellow	 YouTube		Yellow / YouTube / Repeat
	Blue	 Blue	 Prime Video		Blue / Prime Video / Random
	Freeze	 FR EEZE	 SHIFT + STEP-FREEZE		Shift + Pause / Step / Freeze

