 




 





















 

 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Sleep	 Sleep / Timer	 Back	 Back / Return
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 Source	 AV / Input / RDS	 CH-	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 CH+	 CH+ / Page+
 3	 3	 Left	 Left
 Audio/Lang	 Audio / Lang I/II	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Vol-	 Vol-
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 Vol+	 Vol+
 7	 7	 Setup	 Setup / OPT /
 8	 8	 Play/Timeshift	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 Exit	 Exit / Cancel / Clear	 Stop	 Stop / Hold
 CH.List	 Smart / List	 Eject	 Eject / Surround





Original	Replacement
Rec	Rec / Rec Mode
Text	Text / Goto
<<<	<<< / Tune-
>>>/Reveal	>>> / Tune+
I<<</Hold	I<<< / Preset-
>>>I/Sub.P	>>>I / Preset+
SUB.T	Subtitle / EQ
Index/Title	Shift + Sound / Title
Size/Zoom	Zoom / Size
D.Menu	D.Menu / Top
EPG	Guide / EPG / -/--
FAV/Prog	Fav / Marker / PC
P.Mode/Lang	Picture / Format
S.Mode/Search	Sound / Title
Info/Display	Info / Angle
Red/Angle	Red / Netflix / Search
Green/Slow	Green / APP / Repeat

Original	Replacement
Yellow/A-B	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

