 


 
 














 



 








 
 


 
 



 







Original	Replacement	Original	Replacement
	Power		Subt.
	Tv/AV		V-FOR
	?		MEDIA
	MUTE		TEXT
	0		OPT+
	1		TV/R
	2		Audio
	3		EXIT
	4		BACK
	5		Yellow (C)
	6		Blue (D)
	7		Red (A)
	8		Green (B)
	9		UP
	-/-- / EPG		DOWN
	Lock		RIGHT
	Zoom		LEFT

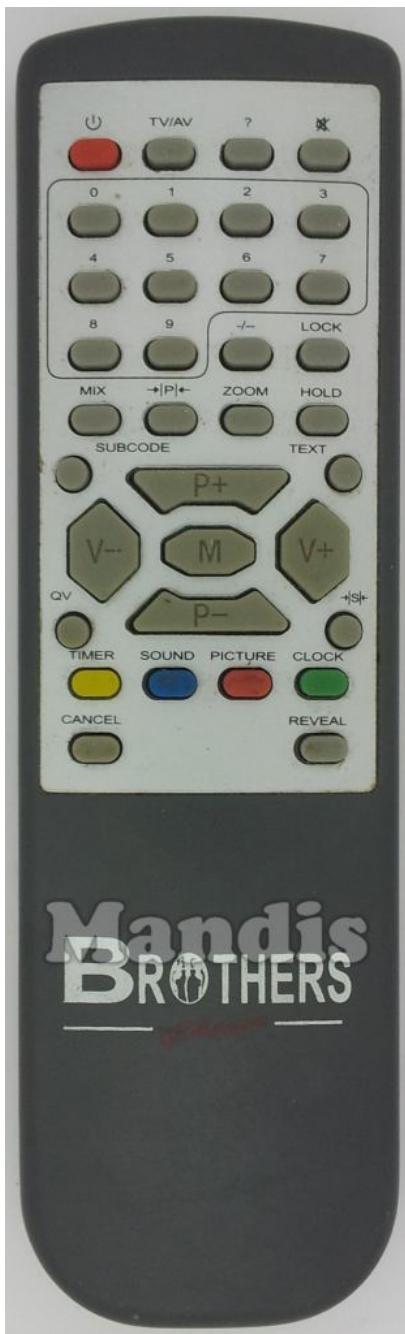



Original	Replacement	Original	Replacement
 M	OK	 OK	OK
 P+	P+	 + CH	CH +
 P-	P-	 CH -	CH -
 V+	Vol+	 + VOL	VOL +
 V-	Vol-	 VOL -	VOL -
 M	M	 MENU	MENU

