













 



 

 

 



















Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Fav / Marker / PC
 TTX/MIX	 Text / Goto
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer

Original	Replacement
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 CH.List	 Shift + Smart / List
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Right	 Right
 Return	 Back / Return
 Left	 Left
 Enter	 OK
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow/C		Yellow / YouTube / Repeat
	Blue/D		Blue / Prime Video / Random
	E-Manual		D.Menu / Top
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<</ <<		<< / Tune-
	AD/Subt.		Subtitle / EQ
	AD/Subt.		Audio / Lang I/II
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>/>>		>> / Tune+

Original	Replacement	Original	Replacement

