


 





Original	Replacement
	 Power
	 Mute / Dimmer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Subtitle / EQ
	 Zoom / Size
	 D.Menu / Top
	 Setup / OPT /
	 Text / Goto
	 AV / Input / RDS
	 Menu / Home
	 Up

Original	Replacement
	 Info / Angle
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-
	 1
	 2
	 3
	 4





Original	Replacement
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
GUIDE	GUIDE EPG
0	HDMI - SAT 0
A	NETFLIX SEARCH Red / Netflix / Search
B	APP REPEAT Green / APP / Repeat
C	YouTube REPEAT A-B Yellow / YouTube / Repeat
D	Prime Video RANDOM Blue / Prime Video / Random
RETURN	SHIFT + RETURN BACK Shift + Back / Return

Original	Replacement

