





Original	Replacement	Original	Replacement
	Power		Power
	Portal/Energy Saving		Sleep / Timer
	[]/Ratio		Picture / Format
	Input		AV / Input / RDS
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		D.Menu / Top

Original	Replacement	Original	Replacement
	Vol+		Vol+
	Fav		Fav / Marker / PC
	PR+/Page Up		CH+ / Page+
	Vol-		Vol-
	3D		Zoom / Size
	PR-/Page Down		CH- / Page-
	Mute		Mute / Dimmer
	Settings		Setup / OPT /
	Info/Home		Info / Angle
	Q.Menu/3D		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-





Original	Replacement
EXIT	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Text	Text / Goto
T.Opt	Shift + Setup / OPT / Tools
Subtitle	Subtitle / EQ
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
<<<	<<< / Tune-
>>>	>>> / Tune+
Simplink	Display / Media
AD	Audio / Lang I/II
Rec	Rec / Rec Mode
My APPS	Shift + Green / APP / Repeat

Original	Replacement

