



Original	Replacement	Original	Replacement
	Tv		TV/Radio /
	Power		Red
	World		Green
	[≡]/Text		Yellow
	Sleep		Blue
	Music/Movie/Phot		Vol+
	1		Mute
	2		PR+
	3		Vol-
	4		i
	5		PR-
	6		Menu
	7		Up
	8		Q.Menu
	9		Left
	Source/Games		OK
	0		Right
	TV/Radio /		Shift + Back / Return
	Power		Red / Netflix / Search
	Smart / List		Green / APP / Repeat
	Text / Goto		Yellow / YouTube / Repeat
	Sleep / Timer		Blue / Prime Video / Random
	Sound / Title		Vol+
	1		Mute / Dimmer
	2		CH+ / Page+
	3		Vol-
	4		Info / Angle
	5		CH- / Page-
	6		Menu / Home
	7		Up
	8		D.Menu / Top
	9		Left
	AV / Input / RDS		OK
	0		Right





Original	Replacement	Original	Replacement
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	[≡]..		Setup / OPT /
	Lang		Audio / Lang I/II
	O/*		Zoom / Size
	Q./*		Picture / Format
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Guide		Guide / EPG / -/--
	[-O-]		Display / Media

