


 
 

 




 



 
 

 
 
 

 

 
 


 
 
 






Original	Replacement
 Power	 Power
 Tv/Radio	 TV/R
 Subtitle	 Subt
 Q Menu	 Menu
 Guide	 Guide
 [ ]/Ratio	 Dual
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 List	 List
 Q.View	 Format
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 APP/*	 Shift + Media
 Fav	 Pre Ch
 PR+	 Ch +
 PR-	 Ch -
 Text	 Text
 Info	 Info
 T.Opt	 Options
 Smart	 Smart
 My Apps	 Media
 Back	 Back
 Exit	 Exit
 Up	 Up





Original	Replacement	Original	Replacement
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Settings	 +  Shift + Options		
 Rec	 Rec		
 Stop/Line Tv	 Stop		
 <<	 <<		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

