



Original	Replacement
Power	Power
Netflix	Shift + Red / Netflix /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Replacement
Vol-	Vol-
i	Info / Angle
PR-	CH- / Page-
Menu	Menu / Home
Up	Up
Q.Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Back	Back / Return
Down	Down
EXit	Exit / Cancel / Clear
World	Smart / List
Camera/Music/Ph	Display / Media
Guide	Guide / EPG / -/--
*/o	Picture / Format
Games	AV / Input / RDS





Original	Replacement
[=]/Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Lang	Audio / Lang I/II
[=]..	Subtitle / EQ
[-O-]	Zoom / Size
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Original	Replacement

