



 



 



 








 





Original	Replacement
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/-
	 0

Original	Replacement
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 CH	CH+ / Page+	 DTV	DTV
 Subtitle	Subtitle / EQ	 EPG	EPG
 Vol+	Vol+	 Tv/Radio	TV/Radio /
 CH-	CH- / Page-		
 T.Shift	Setup / OPT /		
 Vol-	Vol-		
 Play/Pause/Hold	Play / Slow		
 Play/Pause/Hold	Shift + Stop /		
 <</Reveal	<< / Tune-		
 >>/Size	Zoom / Size		
 >>/Size	>> / Tune+		
 Stop/Index	Stop / Hold		
 I<<	I<< / Preset-		
 S.Page/>>I	>>I / Preset+		
 Text	Text / Goto		
 FAV	Fav / Marker / PC		
 Audio	Audio / Lang I/II		
		 LIST SMART	Smart / List
		 GUIDE EPG	Guide / EPG / -/-
		 PROGRAM TV/RADIO	TV/Radio /

