



Original	Replacement	Original	Replacement
Standby	Power	Vol+	Vol+
Rec PVR	Rec / Rec Mode	Right	Right
PVR List	Smart / List	Favourite	Fav / Marker / PC
Mute	Mute / Dimmer	CH-	CH- / Page-
EPG	Guide / EPG / -/-	Down	Down
Info	Info / Angle	Tv/Radio	TV/Radio /
TTX	Text / Goto	1	1
Audio	Audio / Lang I/II	2	2
DTV/VCR	AV / Input / RDS	3	3
Subtitle	Subtitle / EQ	Recall	Back / Return
Menu	Menu / Home	4	4
Up	Up	5	5
CH+	CH+ / Page+	6	6
Exit	Exit / Cancel / Clear	Goto	Shift + Text /
Left	Left	7	7
Vol-	Vol-	8	8
OK	OK	9	9





Original		Replacement		Original		Replacement	
	0		0				
	<<		<< / Tune-				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Repeat	+  /	Shift + Green / APP / REPEAT				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

