







 

































Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 Eject/Tv Audio	 Eject / Surround
 4	 4
 5	 5
 6	 6
 Recall/Goto	 Shift + Text /
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Menu	 Menu / Home
 Source	 AV / Input / RDS
 Up	 Up

Original	Replacement
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 DVD Menu	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Vol-	 Vol-
 Pic	 Picture / Format
 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer
 Aspect	 Shift + Picture / Format
 DVD Setup	 Setup / OPT /
 Back/Tv/Radio	 Shift + Back / Return
 Text	 Text / Goto





Original	Replacement
EPG	Guide / EPG / -/--
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
FAV	Fav / Marker / PC
Info	Info / Angle
Red/DVD/USB	Red / Netflix / Search
Green/Title	Green / APP / Repeat
Yellow/PBC	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Return	Back / Return
Display	Display / Media
DVD Audio	Audio / Lang I/II

Original	Replacement
Subtitle	Subtitle / EQ
Reveal	Shift + Exit / Cancel / Clear
Hold	Shift + Stop /
List	Smart / List
Index	TV/Radio /
Subpage	Shift + Smart / List
Size	Zoom / Size
Mix	Shift + Display / Media
Freeze	Shift + Pause / Step /

