





 

 


 











 



 





 
 















Original	Replacement
 Source	 AV / Input / RDS
 Sync Menu	 Setup / OPT /
 Power	 Power
 Digital/Analog	 Display / Media
 Tv/Radio	 TV/Radio /
 Football	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Exit	 Exit / Cancel / Clear
 0	 0

Original	Replacement
 Teletext	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [i+]/[?]	 Info / Angle
 Netflix	 Shift + Red / Netflix /
 Help	 Sleep / Timer
 TV	 Shift + 1
 Action Menu	 D.Menu / Top
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down





Original	Replacement	Original	Replacement
	Home		Menu / Home
	Discover		Fav / Marker / PC
	Vol+		Vol+
	O		Picture / Format
	PR+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	[+]		Zoom / Size
<< button"/>	<<		<< / Tune-
	Play		Play / Slow
>> button"/>	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
>>I button"/>	>>I		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Title List		Smart / List

