




 
 



 


 

 




 



 


 

 








Original	Replacement
 Power	 Power
 Menu	 Menu
 Q.Menu	 D. Menu
 Exit	 Exit
 Back	 Back
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 PR +	 Ch +
 PR-	 Ch -
 i	 Info
 Guide/Tv+Book	 Shift + Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 [≡]/Text	 Text





Original		Replacement		Original	Replacement
	*/o..		Eject		
	Source/Game		AV		
	*/o		List		
	World		Guide		
	Music/Movie/Phot		Options		
	[-O-]		Sleep		
	[≡]..		Subt		
	Lang		Dual		
	Rec		Rec		
	Stop		Stop		
	Pause		Pause		
	Play		Play		
	>>		>>		
	<<		<<		

