











 



 



 







 



 

 

 

 

 







 



 



 

 



 









Original	Replacement	Original	Replacement
 Amplifier Power	 Power	 Source	 AV / Input / RDS
 CD Power	 Shift + Power	 Folder+	 Up
 1	 1	 Folder-	 Down
 Disc Layer	 Eject / Surround	 Muting	 Mute / Dimmer
 2	 2	 Dimmer	 Shift + Mute / Dimmer
 3	 3	 Vol+	 Vol+
 4	 4	 Vol-	 Vol-
 5	 5	 Stop	 Stop / Hold
 6	 6	 << / Tune-	 << / Tune-
 7	 7	 >>	 >> / Tune+
 8	 8	 Play	 Play / Slow
 9	 9	 Pause	 Pause / Step / Freeze
 0	 0	 I<<	 I<< / Preset-
 +10	 Guide / EPG / -/-	 >>I	 >>I / Preset+
 Enter	 OK	 Repeat	 Green / APP / Repeat
 Right	 Right	 Call	 Display / Media
 Left	 Left	 Time	 Sleep / Timer





Original	Replacement
 Random	 Blue / Prime Video / Random
 Clear	 Exit / Cancel / Clear
 Title/Artist	 Sound / Title
 Mode Select	 Smart / List
 Program/Direct	 TV/Radio /
 Input Select Up	 CH+ / Page+
 Input Select Down	 CH- / Page-
 Tuner Preset-	 Shift +  << / Preset-
 Tuner Preset+	 Shift + >>  / Preset+

Original	Replacement

