

 
 


 
 

 
 
 

 
 


 


 

 
 











 





 



 





 


 
 



 












Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 DVD Setup	 Media	 Down	 Down
 Title	 List	 Right	 Right
 Menu (Blue)	 D. Menu	 Left	 Left
 USB/CR	 3D	 Enter	 Ok
 Nicam/A2	 Shift + Options	 1	 1
 Sleep	 Sleep	 2	 2
 Aspect	 Format	 3	 3
 Eject	 Eject	 4	 4
 Display	 Shift + Info	 5	 5
 Auto	 Back	 6	 6
 P.Mode	 Shift + Format	 7	 7
 S.Mode	 Shift + Dual	 8	 8
 DTV	 Smart	 9	 9
 Source	 AV	 0	 0
 Menu	 Menu	 +/-	 Shift + Guide





Original	Replacement	Original	Replacement
 EPG	 Guide	 I<</Reveal	 I<<
 Recall	 Pre Ch	 >>I/Sbpage	 >>I
 CH+	 Ch +	 Subtitle (Green)	 Subt
 CH-	 Ch -	 Zoom	 Shift + Eject
 Info	 Info	 Goto	 Options
 FAV	 Shift + Pre Ch	 Subtitle (Blue)	 Shift + Subt
 Tv/Radio	 TV/R	 Angle	 Shift + TV/R
 Audio	 Dual	 Red/Program	 Red
 Vol+	 Vol +	 Green/Intro	 Green
 Vol-	 Vol -	 Yellow/Repeat	 Yellow
 Text	 Text	 Blue/A-B	 Blue
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Rec/Hold	 Rec		
 <</Index	 <<		
 >>/Size	 >>		

