









 

 

 









 

 











Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Zoom / Size		3		3
	USB/CR		Shift + 8		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	PMode		Picture / Format		7		7
	SMode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/-		Guide / EPG / -/-
	Left		Left		Back		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement
