







 

 




 

 











 

 
 






 
 
 

 

 





 

| Original   | Replacement  |
|--|--|
|  SOURCE   |  RDS AV INPUT AV / Input / RDS    |
|  Power    |  Power                            |
|  1        |  TV 1                             |
|  2        |  DVD 2                            |
|  3        |  CD - STB 3                       |
|  4        |  VIDEO 4                          |
|  5        |  TAPE 5                           |
|  6        |  TUNER 6                          |
|  7        |  AUX - HDD 7                      |
|  8       |  USB 8                           |
|  9      |  BLUETOOTH 9                    |
|  EPG    |  GUIDE EPG Guide / EPG / -/--   |
|  0      |  HDMI - SAT 0                   |
|  PRE-CH |  RETURN BACK Back / Return      |
|  HDMI   |  SHIFT + HDMI - SAT 0 Shift + 0 |
|  YPbPr  |  OPT-TOOLS SETUP Setup / OPT /  |
|  VIDEO  |  SHIFT + VIDEO 4 Shift + 4      |

| Original  | Replacement   |
|---|---|
|  PC          |  SHIFT + PC FAV MARKER Shift + Fav / Marker / PC |
|  Vol CH+     |  CH PAGE CH+ / Page+                             |
|  Mute        |  DIMMER MUTE Mute / Dimmer                       |
|  Vol+        |  VOL+ Vol+                                       |
|  Vol-        |  VOL- Vol-                                       |
|  ZOOM        |  SIZE ZOOM Zoom / Size                           |
|  CH-         |  CH PAGE CH- / Page-                             |
|  Dual        |  LANG I/II AUDIO Audio / Lang I/II               |
|  ADJ Audio   |  TITLE SOUND Sound / Title                       |
|  ADJ Video  |  FORMAT PICTURE Picture / Format                |
|  Sleep     |  SLEEP Sleep / Timer                           |
|  Up        |  Up  |
|  Left      |  Left  |
|  OK        |  OK  |
|  Right     |  Right   |
|  MENU/EXIT |  HOME MENU Menu / Home                         |
|  MENU/EXIT |  CLEAR EXIT CANCEL Exit / Cancel / Clear       |





| Original  | Replacement   |
|---|---|
|    |  Down                        |
|    |  Info / Angle                |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Blue / Prime Video / Random |
|    |  Text / Goto                 |
|    |  Shift + Text /              |
|    |  Shift + Zoom /              |
|    |  >> / Tune+                  |
|    |  Play / Slow                 |
|   |  Subtitle / EQ              |
|  |  Stop / Hold               |
|  |  << / Tune-                |
|  |  Fav / Marker / PC         |
|  |  Smart / List              |
|  |  Shift + Audio / Lang I/II |

| Original  | Replacement   |
|---|---|
|  |  Pause / Step / Freeze |

