



Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 V+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+

Original	Replacement
 V-	 Vol-
 World/Internet	 Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Music/Camera	 Display / Media
 TV Guide	 Guide / EPG / -/-
 */O	 Shift + 1
 */Q	 Shift + 2





Original	Replacement
[=]/Text	GOTO TEXT Text / Goto
Red	Red / Netflix / SEARCH Search
Green	Green / APP / Repeat REPEAT
Yellow	Yellow / YouTube / REPEAT A-B Repeat
Blue	Blue / Prime Video / RANDOM Random
Lang	Audio / Lang I/II AUDIO
[=].	Sound / Title TITLE SOUND
[-O-]	Setup / OPT / SETUP
<<	<< / Tune- TUNE-
Pause	Pause / Step / Freeze STEP-FREEZE
>>	>> / Tune+ TUNE+
Rec	Rec / Rec Mode REC MODE
Play	Play / Slow SLOW
Stop	Stop / Hold HOLD

Original	Replacement

