




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up / CH + / I<<	 Up
 3	 3	 Down / CH - / >>I	 Down
 4	 4	 Right / Vol +	 Right
 5	 5	 Left / Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 Up / CH + / I<<	 I<<
 8	 8	 Down / CH - / >>I	 >>I
 9	 9	 Up / CH + / I<<	 Ch +
 0	 0	 Down / CH - / >>I	 Ch -
 FAV	 Shift + Pre Ch	 Left / Vol -	 Vol -
 Recall	 Pre Ch	 Right / Vol +	 Vol +
 Game	 Media	 Red / Zoom	 Red
 Auto	 Smart	 Green / Lan/Audio	 Green
 Info	 Info	 Yellow /	 Yellow

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 AUX
 MUTE	 MUTE	 DVD	 REC MODE
 1	 1	 SAT	 PLAY MODE
 2	 2	 AUX	 II
 3	 3	 GUIDE	 ■
 4	 4	 EXIT	 ●
 5	 5	 Up / CH + / I<<	 <<<
 6	 6	 Down / CH - / >>I	 <<
 7	 7	 Right / Vol +	 >>
 8	 8	 Left / Vol -	 >>>
 9	 9	 OK	 LIST
 0	 0	 Up / CH + / I<<	 DUAL
 FAV	 Shift + Pre Ch	 Down / CH - / >>I	 SUBT
 Recall	 Pre Ch	 Up / CH + / I<<	 OPT
 Game	 Media	 Down / CH - / >>I	 PROG
 Auto	 Smart	 Left / Vol -	 SEARCH
 Info	 Info	 Right / Vol +	 PICTURE
		 Red / Zoom	 ECO
		 Green / Lan/Audio	 SLEEP
		 Yellow /	 TV/R
			 FORMAT
			 3D
			 E-MANUAL
			 REPEAT
			 ZOOM
			 TIMER
			 D.MENU
			 TEXT
			 AV
			 TOP MENU
			 DISPLAY
			 MENU
			 INFO
			 CLEAR
			 EXIT
			 RETURN
			 BACK
			 HOME
			 SMART
			 APP
			 MEDIA
			 +
			 CH +
			 -
			 CH -
			 1
			 2
			 3
			 4
			 5
			 6
			 7
			 8
			 9
			 GUIDE
			 0
			 PRE-CH
			 A
			 B
			 C
			 D
			 Mandis SHOP
			 www.mandis.tv





	Original	Replacement		Original	Replacement
	Blue / Text	 D	Blue		
	Red / Zoom		Eject		
	Green / Lan/Audio		Dual		
	Yellow /		Play		
	Yellow /		Pause		
	Blue / Text		Text		
	<< / Tv/Radio		<<		
	<< / Tv/Radio		TV/R		
	>> / Subtitle		>>		
	>> / Subtitle		Subt		

