

 
 
 
 
 

 

 










Original	Replacement
Power	Power
Power Tv	+  Shift + Power
Input	AV / Input / RDS
Mute	Mute / Dimmer
Open/Close	Eject / Surround
Input Tv	+  Shift + AV / Input / RDS
1	1
2	2
3	3
Vol+ Tv	+  Shift + Vol+
4	4
5	5
6	6
Vol- Tv	+  Shift + Vol-
7	7
8	8
9	9

Original	Replacement
Vol+	Vol+
Rec List/Disc	D.Menu / Top
0	0
Q.Menu/Title	+  Shift + D.Menu / Top Menu
Vol-	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause/Time Shift	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Info/Menu	Info / Angle
Left	Left
Enter	OK





Original	Replacement
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Smart / List
	 CH- / Page-
	 CH+ / Page+
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Guide / EPG / -/--
	 Text / Goto
	 Shift + Rec / Rec Mode
	 Rec / Rec Mode
	 TV/Radio /

Original	Replacement
	 Subtitle / EQ



t Program