

 

 
 
 
 
 
 
 

 
 

 

 
 
 


 

 
 
 

 
 

 




 





 


 
 



Original	Replacement
 On	 Shift + Power
 Standby	 Power
 Sleep	 Sleep
 Dimmer	 Smart
 Status	 Options
 Search	 TV/R
 BD	 1
 Tuner	 2
 Band	 3
 DVD	 4
 Dock	 5
 Shift	 6
 TV	 7
 Game	 8
 SAT/CBL	 9
 V.AUX	 0
 Memory	 Subt

Original	Replacement
 Mode	 Format
 CH+	 Ch +
 CH-	 Ch -
 Tuning Up	 Shift + Ch +
 Tuning Down	 Shift + Ch -
 Quick Select 1	 Shift + 1
 Quick Select 2	 Shift + 2
 Quick Select 3	 Shift + 3
 Quick Select 4	 Shift + 4
 Menu	 Menu
 Audio Adjust	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Replacement		Original		Replacement	
	Enter		Ok		Repeat Ipod		Text
	CH Level		Media		Random Ipod		Info
	Return		Back				
	Night		3D				
	Restorer		Exit				
	Tone		List				
	Mute		Mute				
	Surround Left		Shift + Left				
	Surround Right		Shift + Right				
	Audio Delay -		Shift + Vol -				
	Audio Delay +		Shift + Vol +				
	I<< Ipod		I<<				
	Stop Ipod		Stop				
	Play/Pause Ipod		Play				
	>>I Ipod		>>I				
	<< Ipod		<<				
	>> Ipod		>>				

