
 
 

 
 
 
 


 


 

 




 

 







Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 Fav	 Fav / Marker / PC
 World	 Smart / List
 TV/Radio	 TV/Radio /
 Text	 Text / Goto
 Mail	 Display / Media
 Lib	 D.Menu / Top
 Timers	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Music/Movie/Phot	 Sound / Title
 0/AV	 0
 Info	 Info / Angle
 Vol+	 Vol+
 P↔P	 Zoom / Size
 P+	 CH+ / Page+
 Vol-	 Vol-
 Opt	 Setup / OPT /
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 Up	 Up
 Exit	 Exit / Cancel / Clear





Original		Replacement		Original		Replacement	
	Left		Left				
	OK		OK				
	Right		Right				
	Menu		Menu / Home				
	Down		Down				
	Back		Back / Return				
	Subtitle		Subtitle / EQ				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Audio		Audio / Lang I/II				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				

