

 

 

 

 

 

 

 

 

 

 

 

 

 

 









Original	Replacement
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 [I]	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu/Browse	 Menu / Home
 [≡]	 Text / Goto
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 P<P	 Back / Return
 Ambilight	 Smart / List
 Mode	 D.Menu / Top
 <<	 << / Tune-





	Original	Replacement	Original	Replacement
	Stop/Cancel	 HOLD		Stop / Hold
	Play	 SLOW		Play / Slow
	>>	 TUNE+		>> / Tune+
	Rec	 REC MODE		Rec / Rec Mode
	[i+]	 MEDIA DISPLAY		Display / Media
	[1 2]	 FORMAT PICTURE		Picture / Format
	FAV	 PC FAV MARKER		Fav / Marker / PC

