



 
 


 




Original		Replacement		Original		Replacement	
	Standby		Power		Vol+		Vol +
	Open/Close		Eject		Vol-		Vol -
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		Enter		Ok
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Red		Red
	9		9		Green		Green
	0		0		Yellow		Yellow
	Info/Display		Info		Blue		Blue
	Q-Play/Tv/Radio		TV/R		Next		>>
	Menu/PgDn		Menu		Prev		<<
	Setup		Options		Rew		<<
	Exit/Slow		Exit		FF		>>





Original		Replacement		Original		Replacement	
	Play		Play		Random		Sleep
	Stop		Stop		Mute		Mute
	Pause		Pause		USB		Smart
	Subtitle		Subt				
	Audio		Dual				
	List/PBC		List				
	Title/PgUp		D. Menu				
	Return		Back				
	Rec/Repeat		Rec				
	PVR/Zoom		Shift + Eject				
	FAV/A-B		Pre Ch				
	Video		AV				
	TTX/Search		Text				
	DVD/DVB		Media				
	Step		Format				
	EPG/P/N		Guide				
	Angle		3D				

