



 



 

 



 

 

 

 

 

 

 



 







Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Infos		Info / Angle
	Vol +		Vol+
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol -		Vol-
	Format		Picture / Format
	Prog -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menu		Menu / Home
	Media		Display / Media
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Back		Shift + Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear





Original	Replacement	Original	Replacement
 AD	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Text	 Text / Goto		
 Radio	 TV/Radio /		
 I<<	 I<< / Preset-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 >>I	 >>I / Preset+		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

