


 

 


 


 



 




 






 











 












 


 

 

 






 





Original	Replacement	Original	Replacement
	Power		Power
	[]		Subt
	Audio		Dual
	[■]/SV		TV/R
	V≡/LP		Pre Ch
	[≡I]/000		Guide
	Mute/Timer		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause		Pause
	T		Options
	M		Menu
	E		Exit
	i		Info
	Rec		Rec
	UP		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Stop		Stop
	<<		<<




 



 



 











 



 



 

 



 



 









 



 



 



 



 




Original		Replacement		Original		Replacement	
	Play		Play				
	>>		>>				

 







Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 Red	 Red
 6	 6	 Green	 Green
 7	 7	 Yellow	 Yellow
 8	 8	 Blue	 Blue
 9	 9	 <<	 <<
 0	 0	 Stop	 Stop
 M	 Menu	 Play	 Play
 E	 Exit	 >>	 >>
 i	 Info	 Mute/Timer	 Mute
 Rec	 Rec	 Audio	 Dual
 Pause	 Pause	 []	 Subt
 T	 Options	 []/SV	 TV/R






 





















 











 









 


 
 


 
 









 

 


Original		Replacement	
	V≡/LP		Pre Ch
	[≡I]/000		Guide

Original		Replacement	





Original		Replacement		Original		Replacement	
	Power		Power		Green		Green
	1		1		Yellow		Yellow
	2		2		Blue		Blue
	3		3		<<		<<
	4		4		Stop		Stop
	5		5		Play		Play
	6		6		>>		>>
	7		7		Pause		Pause
	8		8		T		Options
	9		9		M		Menu
	0		0		E		Exit
	OK		Ok		Mute/Timer		Mute
	Up		Up		[≡I]/000		Guide
	Down		Down		V≡/LP		Pre Ch
	Right		Right		[■]/SV		TV/R
	Left		Left		Audio		Dual
	Red		Red		[]		Subt

