










 

 

 

 
 
 



 

 

 

 




 

 




Original	Replacement	Original	Replacement
	Power		Guide
	Eject		Shift + Eject
	Media		Menu
	Format		Smart
	Red		Options
	Green		Info
	1		Up
	2		Down
	3		Right
	4		Left
	5		Ok
	6		Blue
	7		TV/R
	8		Sleep
	9		Exit
	0		D. Menu
	Pre Ch		<<





	Original	Replacement	Original	Replacement
	>>	 >>		
	Play / Pause	 PLAY MODE Play		
	Stop	 Stop		
	<<	  <<		
	>>	 >>		
	LANGUAGE Language	 SOUND DUAL Dual		
	ANGLE Angle	 ECO 3D 3D		
	SUB-T Sub-T	 AD SUBT Subt		
	RETURN Return	 RETURN BACK Back		
	REPEAT Repeat	 REPEAT TEXT Text		
	A-B	 SHIFT + AD SUBT Shift + Subt		
	STEP Step	 II Pause		
	SLOW Slow	 SHIFT + PLAY MODE Play Shift + Play		
	RANDOM Random	 TIMER AV AV		
	Vol +	 + VOL Vol +		
	Vol -	 VOL - Vol -		
	Mute	 MUTE Mute		

