



Original	Replacement
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Display	Display / Media
0	0
Recall	Back / Return
Setup	Setup / OPT /
EPG	Guide / EPG / -/--
Source	AV / Input / RDS

Original	Replacement
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Up	Up
Left	Left
Ok	OK
Right	Right
Down	Down
Ch.List	Smart / List
FAV	Fav / Marker / PC
Exit/Cancel	Exit / Cancel / Clear
CH+/Page+	CH+ / Page+
Vol+	Vol+
S.Mode	Sound / Title
Vol-	Vol-
P.Mode	Picture / Format
CH-/Page-	CH- / Page-
Red/Goto	Red / Netflix / Search



