
 
 
 

 

 

 

 




 

 



 

 




 

 
 





Original	Replacement
	
Power	Power
	
Stop	Stop
	
Pause	Pause
	
Rec	Rec
	
Play	Play
	
<<	<<
	
>>	>>
	
Tv Guide	Guide
	
[<>]/Format	Format
	
*/Setup	Menu
	
Home	Smart
	
TV/Exit	Exit
	
Sources	AV
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue

Original	Replacement
	
[i+]/Info	Info
	
Options	Options
	
List	List
	
Back	Back
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
CH+	Ch +
	
CH-	Ch -
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8





	Original	Replacement		Original	Replacement
	9				
	0				
	Subtitle				
	Text				
	OK				
	Up				
	Down				
	Right				
	Left				

	Original	Replacement

