


 







 













 











 








 

 





 










 


 

 






Original		Replacement		Original		Replacement	
	Power		Power		Sleep		Sleep
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Mode		Media
	0		0		TV / Radio		TV/R
	Info		Info		Freeze		Pause
	Back		Back		Subtitle		Subt
	Vol +		Vol +		Text		Text
	Vol -		Vol -		P.Mode		Shift + Format
	Nicam / A2		3D		S.Mode		Dual





	Original	Replacement	Original	Replacement
	Mix	 Smart		
	Hold	 Stop		
	Index	 Shift + Info		
	Subpage	 AV		
	Reveal	 D. Menu		
	Red	 Red		
	Green	 Green		
	Size	 Format		
	Yellow	 Yellow		
	Blue	 Blue		
	Zoom	 Eject		
	Fav-CH	 Pre Ch		
	EPG	 Guide		
	CH List	 List		

