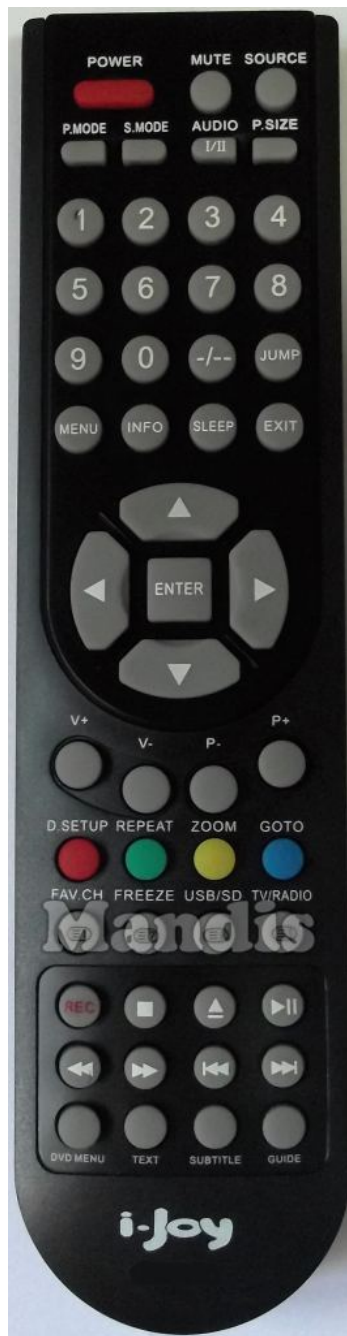 

 
 
 

 


 

 






| Original   | Replacement       | Original    | Replacement                |
|------------|-------------------|-------------|----------------------------|
| Power      | Power             | -/--        | Shift + Guide / EPG / -/-- |
| Mute       | Mute / Dimmer     | Jump        | Smart / List               |
| Source     | AV / Input / RDS  | Menu        | Menu / Home                |
| P.Mode     | Picture / Format  | Info        | Info / Angle               |
| S.Mode     | Sound / Title     | Sleep       | Sleep / Timer              |
| I/II/Audio | Audio / Lang I/II | Exit        | Exit / Cancel / Clear      |
| P.Size     | Zoom / Size       | Up          | Up                         |
| 1          | 1                 | Left        | Left                       |
| 2          | 2                 | Enter       | OK                         |
| 3          | 3                 | Right       | Right                      |
| 4          | 4                 | Down        | Down                       |
| 5          | 5                 | Vol+        | Vol+                       |
| 6          | 6                 | Vol-        | Vol-                       |
| 7          | 7                 | P-          | CH- / Page-                |
| 8          | 8                 | P+          | CH+ / Page+                |
| 9          | 9                 | Red/D.Setup | Red / Netflix / Search     |
| 0          | 0                 | Red/D.Setup | Setup / OPT /              |





| Original   | Replacement   |
|--|---|
|  Green/Repeat   |  Green / APP / Repeat        |
|  Yellow/Zoom    |  Yellow / YouTube / Repeat   |
|  Yellow/Zoom    |  Shift + Zoom /              |
|  Blue/Goto      |  Blue / Prime Video / Random |
|  Blue/Goto      |  Shift + Text /              |
|  [≡i]/FAV.CH    |  Fav / Marker / PC           |
|  [≡?]/Freeze    |  Shift + Pause / Step /      |
|  [≡◆]/USB/SD    |  Shift + 8                   |
|  [≡+] /Tv/Radio |  TV/Radio /                  |
|  Rec            |  Rec / Rec Mode              |
|  Stop           |  Stop / Hold                 |
|  Open/Close   |  Eject / Surround          |
|  Play         |  Play / Slow               |
|  Pause        |  Pause / Step / Freeze     |
|  <<           |  << / Tune-                |
|  >>           |  >> / Tune+                |
|  I<<          |  I<< / Preset-             |

| Original   | Replacement   |
|--|---|
|           |  >>I / Preset+     |
|  DVD Menu |  D.Menu / Top      |
|  Text     |  Text / Goto       |
|  Subtitle |  Subtitle / EQ     |
|  Guide    |  Guide / EPG / -/- |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |
|  |   |

