










 

 

 

 









 



 







 


 





 

 


Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/Clear	 GUIDE

Original	Replacement
 Set	 D. Menu
 O))	 Dual
 [...]	 Subt
 Camera	 Green
 Input/Tv/DVD	 TV/R
 Timer	 AV
 Display	 Info
 Time/Text	 Text
 [+]	 Format
 System Menu	 Media
 Tools	 Options
 Title List	 List
 Cursor Mode	 Exit
 Return	 Back
 Zoom+	 Blue
 Zoom-	 Yellow
 Up	 Up



 


Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Top Menu	 Shift + Menu
 Menu	 Menu
 →	 Shift + Ch +
 ←	 Shift + Ch -
 >/>>	 >>
 <</<	 <<
 >>	 >>
 <<	 <<
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 REC DVD1	 Rec
 Rec Pause	 Shift + Pause

Original	Replacement
 Synchro Rec	 Shift + 1
 Rec Stop DVD1	 Shift + Stop
 Mode Rec DVD1	 Shift + Format
 Chapter Mark	 Smart
 Input Select DVD1	 Shift + AV
 Mark Erase	 Shift + Media
 Progressive DVD1	 Sleep
 Sur DVD1	 Shift + Text
 Rec DVD2	 Shift + Rec
 Rec Pause	 Shift + 2
 Rec Stop DVD2	 Shift + 3
 Rec Mode DVD2	 Shift + 4
 Input Select DVD2	 Shift + 5
 Chapter Mark	 Shift + 6
 Mark Erase	 Shift + 7
 Synchro Rec	 Shift + 8
 Progressive DVD2	 Shift + Sleep

 




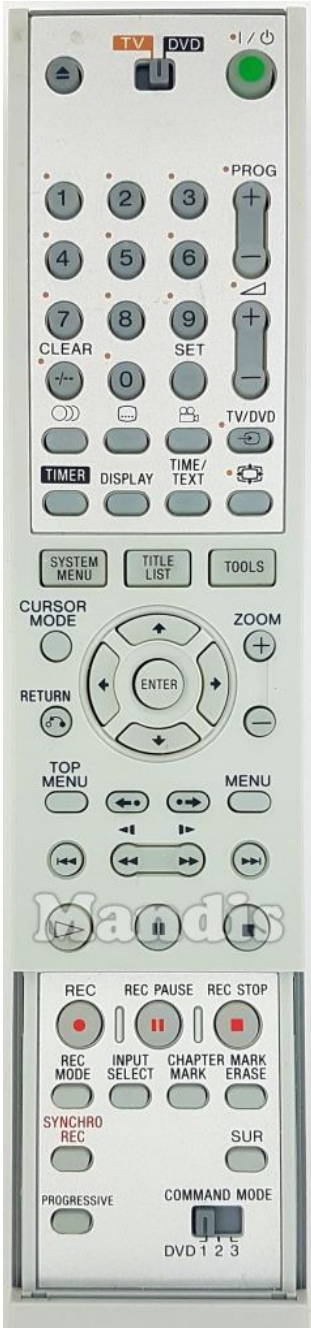





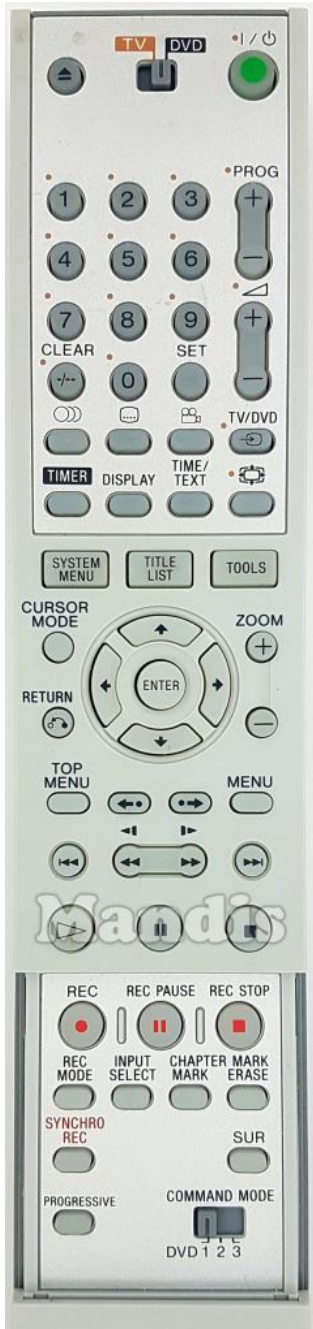


 

 

 

 









 



 


DVD1



Original	Replacement	Original	Replacement
SUR	SHIFT + 9 Shift + 9		







 

 








 


Original	Replacement
 Power	 Power
 Open/Close	 Eject
 Prog+	 Ch +
 Prog-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--/Clear	 GUIDE Guide

Original	Replacement
 Set	 D. Menu
 O))	 Dual
 [...]	 Subt
 Camera	 Green
 Input/Tv/DVD	 TV/R
 Timer	 AV
 Display	 Info
 Time/Text	 Text
 [+]	 Format
 System Menu	 Media
 Title List	 List
 Tools	 Options
 Cursor Mode	 Exit
 Zoom+	 Blue
 Zoom-	 Yellow
 Return	 Back
 Up	 Up





Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Top Menu	 Shift + Menu
 Menu	 Menu
 →	 Shift + Ch +
 ←	 Shift + Ch -
 >/>>	 >>
 <</<	 <<
 >>	 >>
 <<	 <<
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Rec DVD3	 Rec
 Rec Pause	 Shift + Pause

Original	Replacement
 Rec Stop DVD3	 Shift + Stop
 Rec Mode DVD3	 Shift + Rec
 Input Select DVD3	 3D
 Chapter Mark	 Smart
 Mark Erase	 Shift + Media
 Synchro Rec	 Sleep
 Progressive DVD3	 Pre Ch
 Sur DVD3	 Shift + Text



DVD3