

































 


 











 





	Original	Replacement		Original	Replacement
	Power		Power		TV/TXT
	Mute		Mute		Menu
	1		1		Update
	2		2		Mix
	3		3		PR+
	4		4		PR-
	5		5		Up
	6		6		Down
	7		7		Right
	8		8		Left
	9		9		Ok
	0		0		Vol+
	-/--		Guide		Vol-
	AV/TV		AV		Red
	Swap		Pre Ch		Green
	16:9		Format		Yellow/Timer
	i		Info		Blue/PP





Original		Replacement		Original		Replacement	
	SUB		Subt				
	DOUB		TV/R				
	REV		3D				
	Stop		Stop				

