
 






 














 
 


 
 







 
 




 

 
Original	Replacement
 Eject	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 Clear	 Exit / Cancel / Clear
 TV/DVD	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Play Mode	 Shift + Play /
 Zoom	 Zoom / Size
 System Menu	 Shift + D.Menu / Top Menu
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Top Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Replacement
 Down	 Down
 Display	 Display / Media
 I<<	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I	 >>I / Preset+
 <</<I/<II	 << / Tune-
 Play	 Play / Slow
 >>/I>/II>	 >> / Tune+
 Tv Pause	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Rec Stop	 Shift + Stop /
 DUB/HDD/DVD	 Shift + 3
 Rec Mode	 Shift + Rec / Rec Mode
 Vol+ Tv	 Vol+

Original	Replacement
 Prog+ Tv	 Shift + CH+ /
 Power Tv	 Shift + Power
 Vol- Tv	 Vol-
 Prog- Tv	 Shift + CH- /
 Input Tv	 Shift + AV / Input / RDS

