



 







 

 

 


















 



 



 



 



 

 

 















Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original		Replacement		Original		Replacement	
0	0	HDMI - BAT	0	REVEAL TITLE	Title / Reveal	SHIFT + TITLE	Sound / Title
[Circular Arrow]	Recall	RETURN BACK	Back / Return	PRO	PRO	SHIFT + MEDIA DISPLAY	Display / Media
FAV	Fav	PC FAV MARKER	Fav / Marker / PC	HOLD LAN	LAN / Hold	SHIFT + LIST SMART	Smart / List
VOL	Vol +	VOL	Vol+	SIZE A-B	Size / A-B	SIZE ZOOM	Zoom / Size
PICTURE	Picture	FORMAT PICTURE	Picture / Format	SUBPAGE GOTO	Goto / Subpage	GOTO TEXT	Text / Goto
NICAM/A2	Nicam / A2	LANG I/II AUDIO	Audio / Lang I/II	INDEX SLOW	Index / Slow	ANGLE INFO	Info / Angle
CH	CH +	CH PAGE	CH+ / Page+				
VOL	Vol -	VOL	Vol-				
SOUND	Sound	TITLE SOUND	Sound / Title				
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer				
CH	CH -	CH PAGE	CH- / Page-				
[Red]	Red	NETFLIX SEARCH	Red / Netflix / Search				
[Green]	Green	APP REPEAT	Green / APP / Repeat				
[Yellow]	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
[Blue]	Blue / Screen	Prime Video RANDOM	Blue / Prime Video / Random				
TV/TXT	Setup / TV/Txt	OPT-TOOLS SETUP	Setup / OPT /				
CANCEL	D-Menu /	TOP MENU D.MENU	D.Menu / Top				

