







 
















 

 

 


















 










 












Original	Replacement
 On/Standby	 Power
 Select Disc 1	 Shift + 1
 Clear/Dimmer	 Exit / Cancel / Clear
 Memory	 Fav / Marker / PC
 Select Disc 2	 Shift + 2
 Random CD	 Blue / Prime Video / Random
 Pause CD	 Pause / Step / Freeze
 CD	 Yellow / YouTube / Repeat
 Select Disc 3	 Shift + 3
 Stop CD	 Stop / Hold
 Play CD	 Play / Slow
 Tuner (Band)	 TV/Radio /
 Select Disc 4	 Shift + 4
 Rec USB	 Rec / Rec Mode
 Pause USB	 Shift + Pause / Step /
 Select Disc 5	 Shift + 5
 Stop USB	 Shift + Stop / Hold

Hold

Original	Replacement
 Play USB	 Shift + Play /
 Video/AUX/USB	 Red / Netflix / Search
 I<</<</Preset Down/Tuning/Curs	 I<</Preset-
 Tuning/Cursor Up	 CH+ / Page+
 Tuning/Cursor Right/Preset	 >>I / Preset+
 Tuning/Cursor	 CH- / Page-
 Mode	 Picture / Format
 Enter	 OK
 Display	 Display / Media
 Folder	 D.Menu / Top
 Clock/Timer	 Sleep / Timer
 RDS ASPM	 Setup / OPT /
 RDS PTY	 Smart / List
 RDS Display	 Shift + Display / Media
 1	 1
 2	 2
 3	 3





Original		Replacement		Original	Replacement
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	+10		Guide / EPG / -/--		
	Equalizer Mode		Audio / Lang I/II		
	X.Bass/Demo		Sound / Title		
	Vol-		Vol-		
	Vol+		Vol+		

