 
 
 

 



 

 

 

 



 


	Original	Replacement	Original	Replacement
	Power			
	Reset			
	AUX 1			
	AUX 2			
	OPT1/OPT2			
	Vol+			
	Vol-			
	Mute			
	Bass+			
	Bass-			
	Treble+			
	Treble-	