

 
 

 





 




Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/Radio	TV/Radio /
0	0
←PR	Back / Return
Menu	Menu / Home
Info	Info / Angle
Page Up	CH+ / Page+

Original	Replacement
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/-
Page Down	CH- / Page-
Up/PR+	Up
Left	Left
Vol-	Vol-
OK/List	OK
Right	Right
Vol+	Vol+
FAV	Fav / Marker / PC
Down/PR-	Down
Pause	Pause / Step / Freeze
List	Smart / List
Tv/AV	AV / Input / RDS
UHF	Setup / OPT /
PAL/NTSC	Picture / Format
Audio	Audio / Lang I/II





Original	Replacement	Original	Replacement
 AUDIO Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 [...]	 EQ SUBTITLE Subtitle / EQ		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue/Audio L/R	 Prime Video RANDOM Blue / Prime Video / Random		
 Blue/Audio L/R	 TITLE SOUND Sound / Title		

Original	Replacement

