





 


 


 


 
 



 



 

 
 
 

 
 
 
 
 




 
 








 


 
 











 

 




Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		Smart		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back










 






 



 


 


 


 


 

 

 



















	Original	Replacement	Original	Replacement
	Goto	AV		
	<<	<<		
	>>	>>		
	I<<	I<<		
	>>I	>>I		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	Repeat	+ Shift + Text		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		





	Original	Replacement		Original	Replacement
	Standby		Power		Down
	Rec PVR		Rec		Right
	List PVR		List		Left
	Mute		Mute		Ok
	EPG		Guide		Vol +
	Audio		Dual		Vol -
	Info		Info		1
	DTV/VCR		Media		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
					Back





Original	Replacement	Original	Replacement
 GOTO	 Options		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Repeat	 +  Shift + Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

