




 














 















Original	Replacement	Original	Replacement
 Standby	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Zoom/Aspect	 Shift + Zoom /
 2	 2	 Zoom/Aspect	 Picture / Format
 3	 3	 CH-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 OK
 9	 9	 Right	 Right
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 0	 0	 Down	 Down
 List	 Smart / List	 Source	 AV / Input / RDS
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Info/Display	 Display / Media	 Green	 Green / APP / Repeat
 Info/Display	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat





Original	Replacement
 Blue	 Blue / Prime Video / Random
 TTX	 Text / Goto
 Index	 D.Menu / Top
 Hold	 Shift + Stop /
 I/II/Audio	 Audio / Lang I/II
 Repeat/Rec	 Rec / Rec Mode
 Repeat/Rec	 Shift + Green / APP /
 Stop/Reveal	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Size	 Zoom / Size
 Subtitle	 Subtitle / EQ
 <</Subpage	 << / Tune-
 >>	 >> / Tune+
 Tv/Radio	 TV/Radio /
 I<<	 I<< / Preset-
 EPG	 Guide / EPG / -/--

Original	Replacement
 >>I	 >>I / Preset+
 FAV	 Fav / Marker / PC

