

 





 



 

 

 

 

 



 

 

 

 


 

 




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Text / Play/Pause	 Play / Slow
 Text / Play/Pause	 Pause / Step / Freeze
 Text / Play/Pause	 Text / Goto
 Still / Stop	 Stop / Hold
 Radio	 TV/Radio /
 Aspect / Size	 Zoom / Size
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search
 Green / >>	 Green / APP / Repeat
 Green / >>	 >> / Tune+
 Yellow / I<<	 Yellow / YouTube / Repeat
 Yellow / I<<	 I<< / Preset-
 Blue / >>I	 >>I / Preset+
 Blue / >>I	 Blue / Prime Video / Random
 Source	 AV / Input / RDS

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Info	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 Index	 Display / Media
 CH +	 CH+ / Page+
 Vol -	 Vol-
 List	 Smart / List
 CH -	 CH- / Page-
 1	 1
 2	 2
 3	 3





	Original	Replacement		Original	Replacement
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	Audio / I/II	 Audio / Lang I/II			
	0	 0			
	DVB	 D.Menu / Top			
	FAV	 Fav / Marker / PC			
	Sleep	 Sleep / Timer			
	EPG	 Guide / EPG / -/--			
	Prev. CH.	 Back / Return			
	Cancel	 +  Shift + Exit / Cancel / Clear			
	Subtitle	 Subtitle / EQ			
	USB	 +  Shift + 8			
	Rec	 Rec / Rec Mode			

