









 



 
















 



 















 




 



 






 












Original	Replacement	Original	Replacement
 Standby	 Power	 Stop	 Stop / Hold
 1	 1	 Play/Pause	 Play / Slow
 2	 2	 Play/Pause	 Pause / Step / Freeze
 3	 3	 I>/Resume	 Shift + Play /
 4	 4	 Surround	 Eject / Surround
 5	 5	 Sound	 Sound / Title
 6	 6	 Night	 Shift + Sleep / Timer
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Repeat	 Green / APP / Repeat
 9	 9	 Repeat A-B	 Yellow / YouTube / Repeat
 0	 0	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 DIM	 Shift + Mute / Dimmer
 Vol-	 Vol-	 Subw +	 Up
 Left	 Left	 Rear +	 Shift + CH+ /
 Right	 Right	 Center +	 CH+ / Page+
 I<<	 I<< / Preset-	 Tv Vol+	 Shift + Vol+
 >>I	 >>I / Preset+	 Subw -	 Down





Original	Replacement	Original	Replacement
 Rear -	 +  Shift + CH- /		
 Center -	 CH- / Page-		
 Tv Vol-	 +  Shift + Vol-		







 



 

 

 









 

 



 





Original	Replacement
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Replacement
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

