



 

 

 

 



 

 

 

 











 







































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original		Replacement	Original		Replacement
	Display	Display / Media		Hold	+ Shift + Stop /
	Red	Red / Netflix / Search		Text	Text / Goto
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			
	<< / Guide	<< / Tune-			
	<< / Guide	Guide / EPG / -/--			
	Play/Pause / Timeshift	Play / Slow			
	>> / Aspect	>> / Tune+			
	I<< / Cancel	I<< / Preset-			
	>>I / Subpage	>>I / Preset+			
	Stop / Index	Info / Angle			
	Stop / Index	Stop / Hold			
	TV / Radio	TV/Radio /			
	Subtitle	Subtitle / EQ			
	Reveal	Setup / OPT /			
	Size	Zoom / Size			

