



 







































 



























Original		Replacement		Original		Replacement	
	Power		Power		V -		Vol-
	Mute		Mute / Dimmer		Home		Shift + Menu /
	1		1		CH -		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Up		Up
	4		4		Source		AV / Input / RDS
	5		5		Left		Left
	6		6		Enter		OK
	7		7		Right		Right
	8		8		Exit		Exit / Cancel / Clear
	9		9		Down		Down
	List		Smart / List		Display		Display / Media
	0		0		P.Mode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	V +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		MTS		Shift + Smart / List
	CH +		CH+ / Page+		Rec		Rec / Rec Mode





Original	Replacement	Original	Replacement
 Guide	 Guide / EPG / -/--	 CAP	 Shift + Display / Media
 Red	 Red / Netflix / Search	 Subtitle	 Subtitle / EQ
 Green	 Green / APP / Repeat	 TV / Radio	 TV/Radio /
 Yellow	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue	 Blue / Prime Video / Random	 Size / Mouse	 Zoom / Size
 << / Index	 << / Tune-	 Hold / Refresh	 Stop / Hold
 << / Index	 Shift + << /		
 Play/Pause /	 Shift + Play /		
 Play/Pause /	 Pause / Step / Freeze		
 Play/Pause /	 Play / Slow		
 >> / TTX	 >> / Tune+		
 >> / TTX	 Shift + >> /		
 I<< / Sub.Pg	 Shift + I<< / Preset-		
 I<< / Sub.Pg	 I<< / Preset-		
 >>I / Reveal	 >>I / Preset+		
 Stop / Mix	 Shift + Rec / Rec Mode		
 Stop / Mix	 Shift + Stop /		

Hold

